


NOTES:

- TRACER WIRE SHALL BE INSTALLED PER THE CFPUA MSM.
- WIRE SHALL BE STRAPPED TO ALL PVC PIPING WITH ADHESIVE TAPE AT 12 FOOT INTERVALS.
- SECURE WIRE TO ALL TEE AND CROSS FITTINGS WITH ADHESIVE TAPE.
- 4. ALL SPLICES IN THE WIRE SHALL BE MADE WITH 3M DBR DIRECT BURY SPLICE KITS.



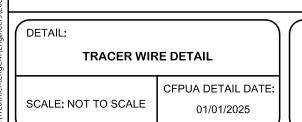

CAPE FEAR PUBLIC UTILITY AUTHORITY 235 GOVERNMENT CENTER DRIVE WILMINGTON, NC 28403 OFFICE: (910)332-6560

DETAIL NO: **WS-6**

SHEET NO: